Bang&Olufsen

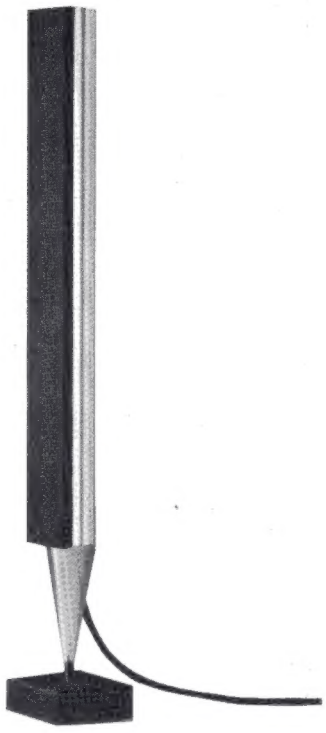

Beolab 8000

**Type 6801, 6802, 6803,
6804, 6805**

SERVICE MANUAL

3538801 Indklæbes i serviceanvisningen Beovox 5 (3538717)
Paste into service manual Beovox 5 (3538717)

DIAGRAM A

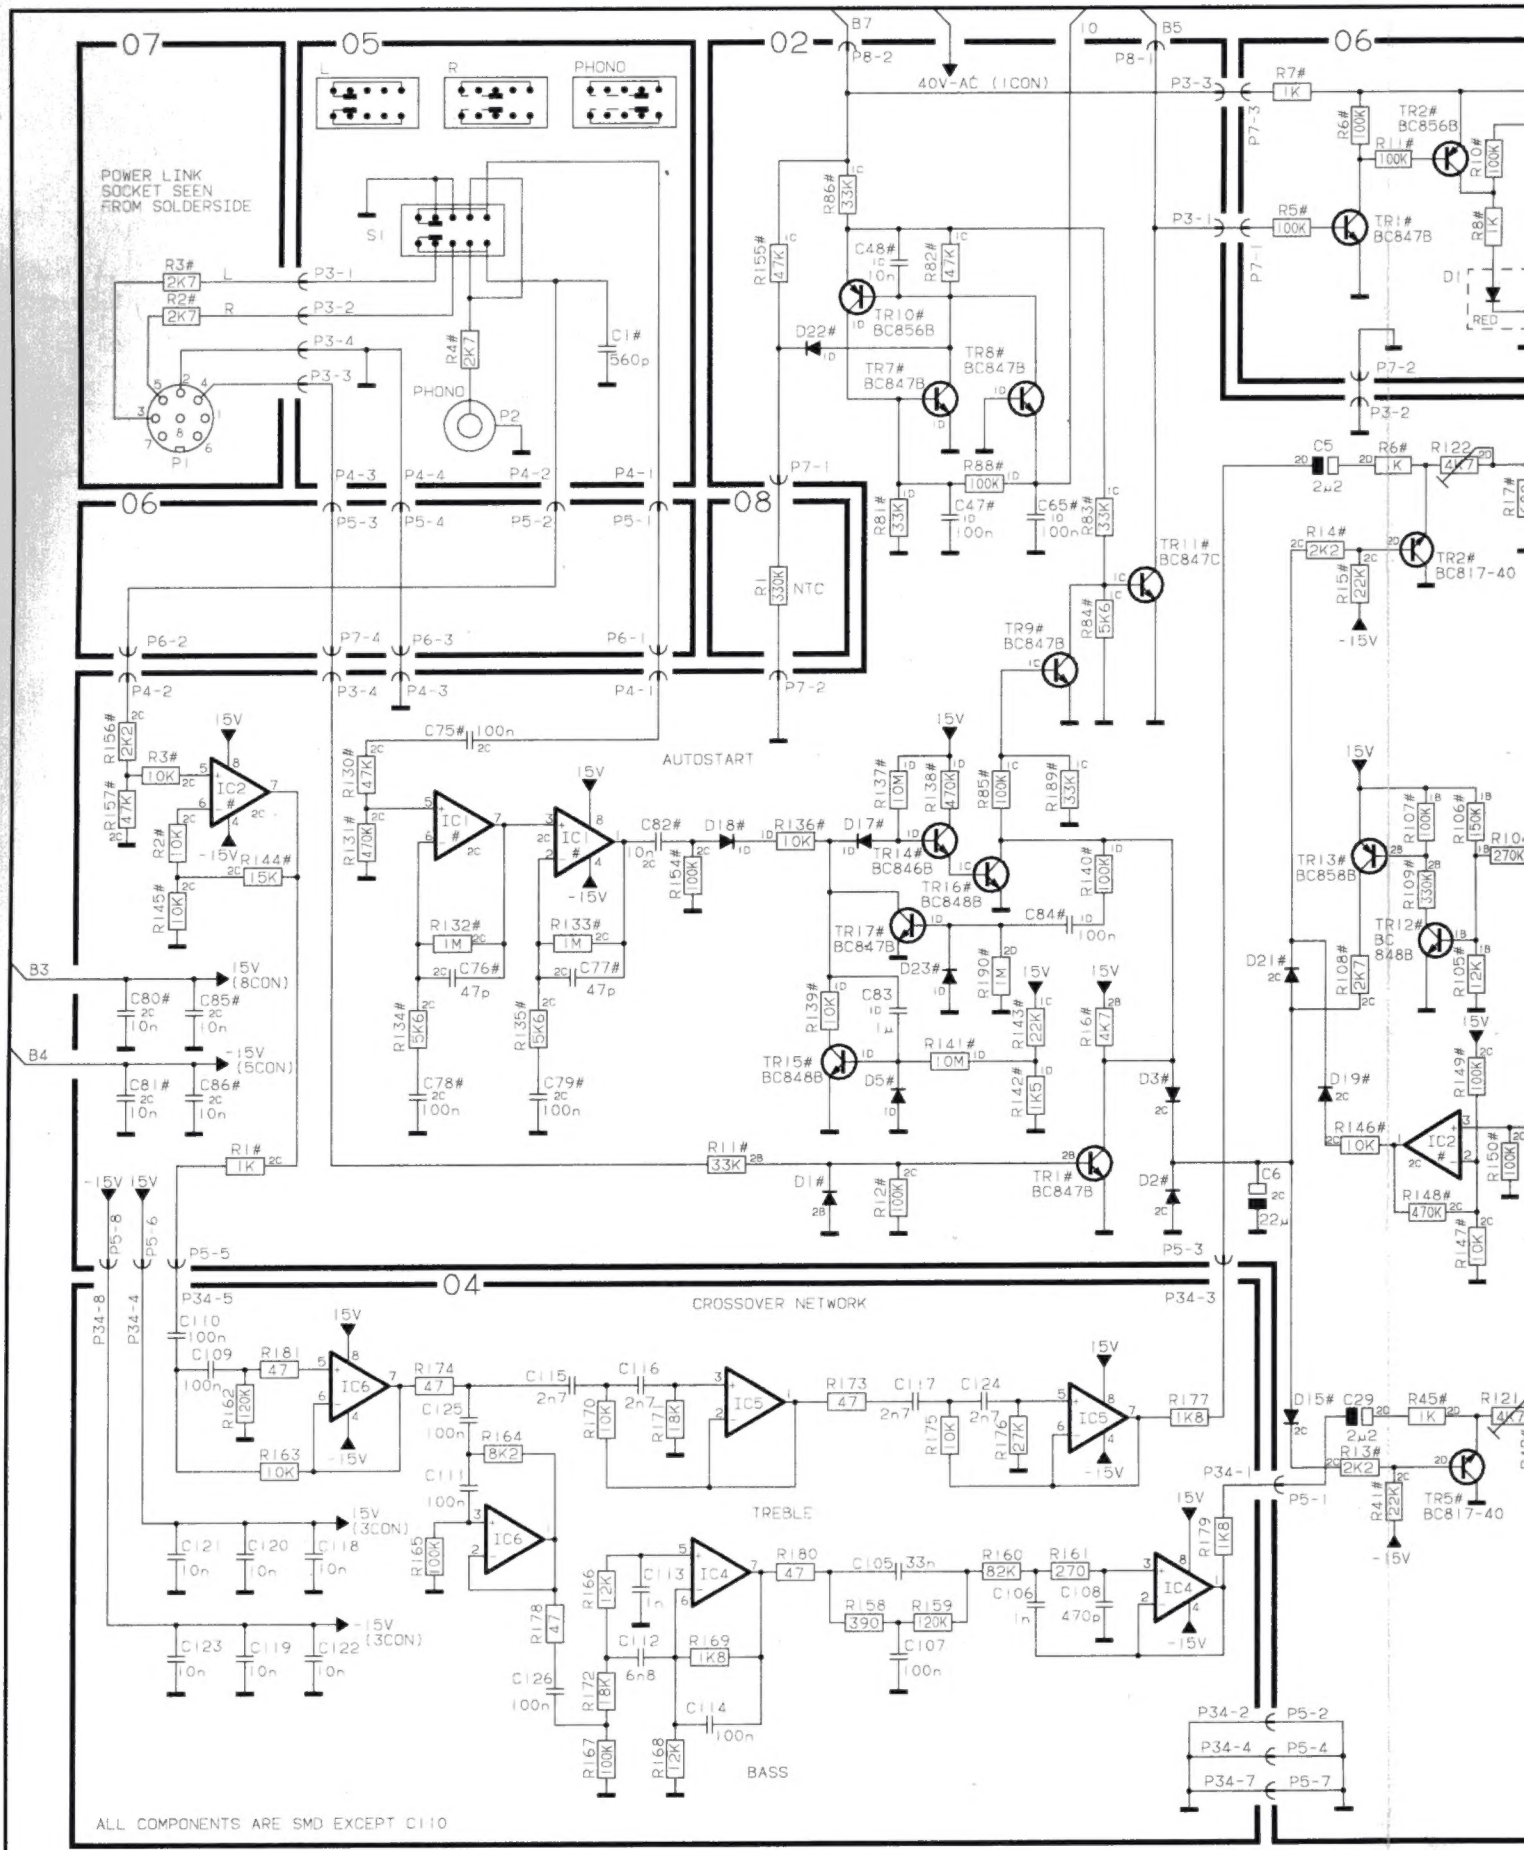
POWER LINK SOCKET SEEN FROM SOLDERSIDE
40V-AC (ICON)
AUTOSTART
CROSSOVER NETWORK
TREBLE
BASS
PHONO
NTC
ALL COMPONENTS ARE SMD EXCEPT C110

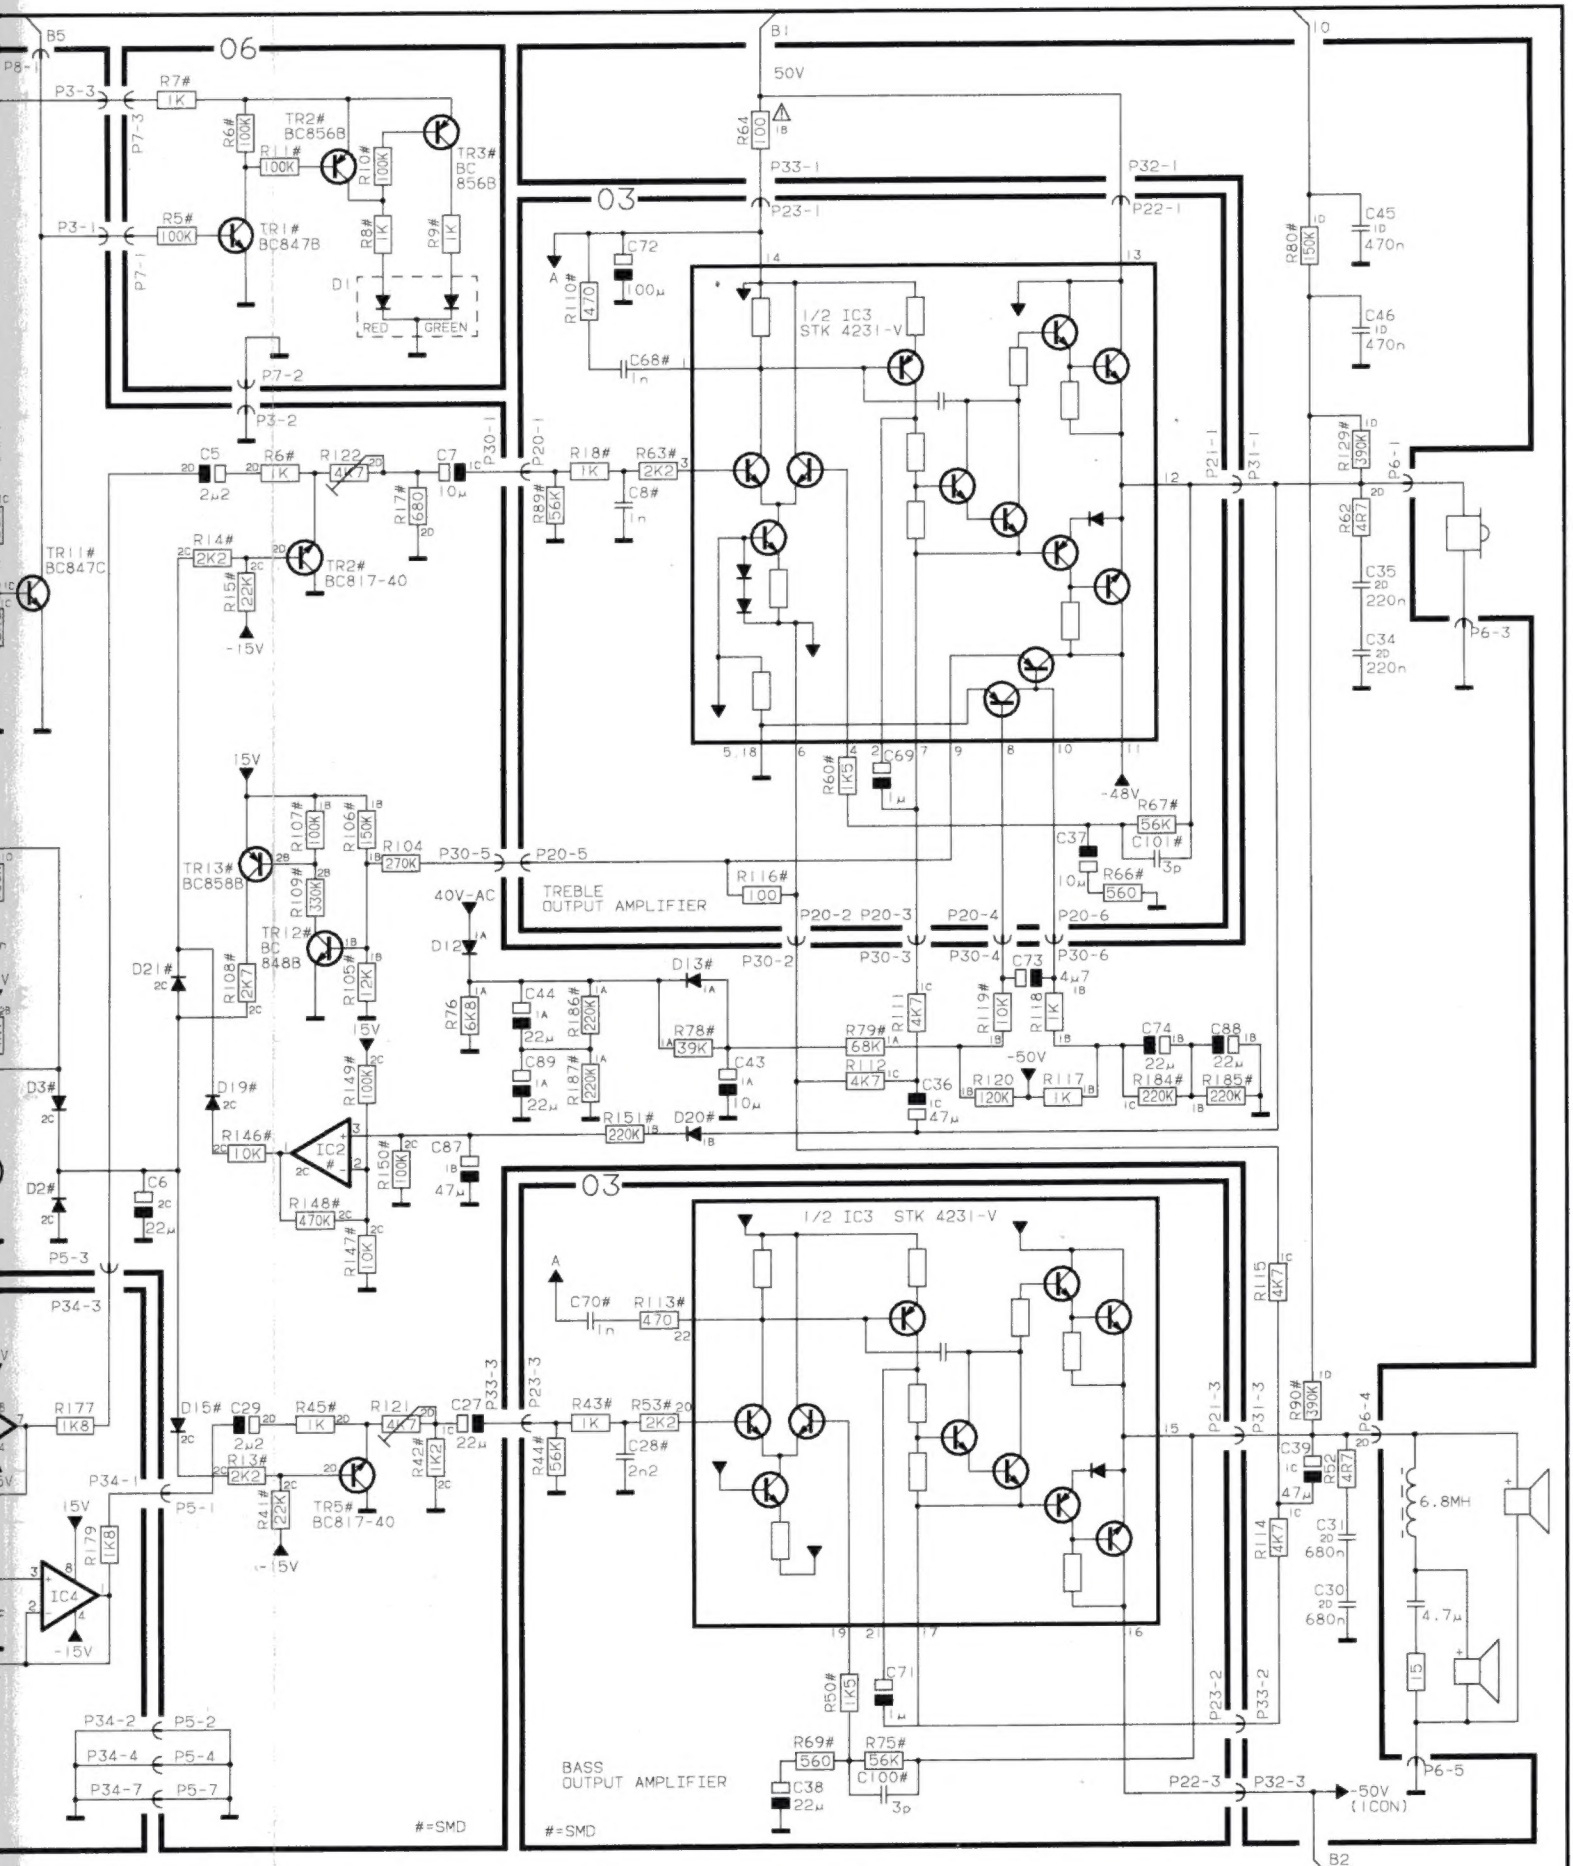
06
03
03
TR1# BC847B
TR2# BC8568
TR3# BC 856B
TR11# BC847C
TR2# BC817-40
TR13# BC858B
TR12# BC 848B
TR5# BC817-40
D1 RED GREEN
1/2 IC3 STK 4231-V
1/2 IC3 STK 4231-V
TREBLE OUTPUT AMPLIFIER
BASS OUTPUT AMPLIFIER
IC2
IC4
50V
-50V
-15V
15V
40V-AC
-48V
6.8MH
4.7µ
#=SMD
#=SMD
-50V (ICON)